

PROTECTION PLAN



	New Vehicle		Certified Pre-owned		
	Platinum	Gold	Executive	Advantage	
<b>Premium Roadside Assistance Services</b>	<b>Benefits Coverage</b>				
	Mechanical Breakdown Towing	■	■	■	■
	Emergency Transportation	■	■	■	■
	Trip Interruption Services	■	■	■	■
	On-site Emergency Road Service Calls	■	■	■	■
	Traffic Accident Services	■	■	■	■
	Hazardous Weather Services	■	■	■	■
	Travel Planning and Discounts	■	■	■	■
	Legal Assistance Services	■	■	■	■
	Stolen Vehicle Services	■	■	■	■
<b>Rental Vehicle Assistance</b>	■	■	■	■	
<b>Tire Road Hazard Coverage*</b>	■		■	■	
<b>Engine Mechanical</b>	<b>Component Coverage</b>				
	Anti-Roll Struts/Dampers	■		■	
	Core Plugs	■	■	■	■
	Crankshaft Pulley	■	■	■	■
	Cylinder Block and All Internal Parts	■	■	■	■
	Cylinder Head and All Lubricated Parts	■	■	■	■
	Drive Plate	■	■	■	■
	Engine Mounts	■	■	■	■
	Fan Motor	■	■	■	
	Fans and Clutch	■	■	■	
	Flywheel Ring Gear	■	■	■	■
	Gauge Oil Level	■	■	■	
	Harmonic Balancer	■	■	■	■
	Manifolds	■	■	■	■
	Oil Pump	■	■	■	■
	Radiator	■	■	■	
	Seals and Gaskets for Listed Components	■	■	■	■
	Timing Belt Tensioner	■	■	■	■
	Timing Chain Cover	■	■	■	■
	Timing Gears/Belt/Chain Other Than Maintenance	■	■	■	■
Turbocharger/Supercharger	■	■	■	■	
Turbocharger Valves	■	■	■	■	
Valve/Rocker Covers	■	■	■	■	
Water Pump	■	■	■	■	
<b>Engine Management</b>	Actuator - By Pass Valve	■	■	■	
	Air Induction System	■	■	■	■
	EGR Control Solenoid Valve	■		■	
	EGR Rate and Feedback Control	■		■	
	EGR Valve	■		■	
	Electronic Ignition	■	■	■	
	EVAP Canister	■		■	
	EVAP Canister Purge Control Valve	■		■	
	Idle Air Control Valve	■		■	
	Ignition Coil	■		■	
	Injectors	■		■	
	Throttle Body	■		■	
	Vacuum and Temperature Sensitive Valves Used in Above Mentioned Components	■		■	
	Spark Plugs**	■		■	
Catalytic Converter	■		■		
<b>Fuel System and Control</b>	Accelerator Pedal, Spring and Bracket	■		■	
	Accelerator Cable and Bracket	■		■	
	Automatic Shut Off / Rollover Valve	■		■	
	Fuel Cap	■		■	
	Fuel Pump	■	■	■	
	Fuel Pump Control Module	■	■	■	
	Fuel Sensors	■		■	
	Fuel Solenoids	■		■	
	Fuel Tank and Lines	■	■	■	
	Fuel Tank Sending Units	■	■	■	
Pressure Regulator	■		■		
Seals and Gaskets for Listed Components	■	■	■		
<b>Transmission</b>	Bell Housing	■	■	■	■
	Clutch Interlock Switch	■	■	■	
	Clutch Master Cylinder	■	■	■	■
	Clutch Pedal and Cable	■		■	
	Inhibitor Switch	■		■	
	Oil Cooler and Lines	■	■	■	
	Oil Pump	■	■	■	■
	Operating Cylinder (Slave)	■		■	
	Over Drive Control Switch	■		■	
	Seals and Gaskets for Listed Components	■	■	■	■
	Shift Lever, Mechanism, Linkage, Cables, Bushing	■		■	
	Shiftlock System	■		■	
	Speedo Cable/Electronic Sensor	■		■	
	Torque Converter	■	■	■	■
Transmission Case and All Internal Parts	■	■	■	■	
Transmission Mounts	■	■	■	■	
<b>Steering</b>	Gear Housing and All Internal Parts	■	■	■	
	Linkage and Couplings	■		■	
	Power Steering Pump	■	■	■	
	Rack and Pinion Assembly	■	■	■	
	Reservoir Tank	■		■	
	Seals and Gaskets for Listed Components	■	■	■	
	Steering Columns and Intermediate Shafts	■		■	
<b>Electrical</b>	Tie Rod Ends	■		■	
	Tilt Steering Mechanism	■		■	
	Actuators for Listed Components	■		■	
	Alternator	■	■	■	
	Clock	■		■	
	Combination Switch	■		■	
	Electrical Switches	■	■	■	
	Electronic Instrument Cluster	■		■	
	Flashers - Hazard and Turn Signal	■		■	
	Heated Seat and Switch	■		■	
	Homelink	■		■	
	Horn	■		■	
Ignition Coil and Modules	■		■		
Ignition Switch	■		■		

INFINITI PROTECTION PLANS  
BENEFIT AND COVERAGE COMPARISON BY VEHICLE PLAN TYPE

	New Vehicle		Certified Pre-owned		
	Platinum	Gold	Executive	Advantage	
<b>Electrical (continued)</b>	OEM Anti-Theft System	■		■	
	Power Door Locks	■		■	
	Power Mirror Motor and Switch	■		■	
	Power Seat Motor	■	■	■	
	Power Trunk Release and Switch	■	■	■	
	Power Window Motor	■	■	■	
	Rear Wiper Motor and Washer Motor	■	■	■	
	Relays for the Covered Components	■		■	
	Solenoid	■		■	
	Starter Motor	■	■	■	
	Sunroof Motor	■	■	■	
	Voltage Regulator	■	■	■	
	Warning Buzzers	■		■	
	Washer Motors	■	■	■	
	Window Regulators inc. Motor	■	■	■	
	Windshield Wiper Motor	■	■	■	
<b>Brakes</b>	Automatic Adjuster	■		■	
	Brake Pedal	■		■	
	Disc Calipers	■	■	■	
	Hydraulic Valves, Line and Fittings	■	■	■	
	Master Cylinder	■	■	■	
	Parking Brake Lever and Release	■		■	
	Proportioning Valve	■		■	
	Reservoir Tank	■		■	
	Seals and Gaskets for Listed Components	■	■	■	
	Vacuum Assist Boosters	■	■	■	
Wheel Cylinders	■	■	■		
<b>Axle/Suspension/Front Wheel Drive</b>	Anchor Arm	■		■	
	Axle Shafts (Excluding Boots)	■	■	■	■
	Constant Velocity Joints (Except CV Boots)	■	■	■	■
	Control Arm Shafts and Bushings	■	■	■	
	Final Drive Housing and Internal Parts	■	■	■	■
	Front Axle Cross Member	■		■	
	Front Coil Spring	■	■	■	
	Front Wheel Bearings and Seals	■	■	■	■
	Linkage and Bushings	■		■	
	Seals and Gaskets for Listed Components	■	■	■	■
	Stabilizer Shaft	■	■	■	
	Strut Mounting Plates, Bushings and Bearings	■	■	■	
	Tension Rod	■		■	
	Torque Arm	■		■	
Upper and Lower Ball Joints	■	■	■		
Upper and Lower Control Arms	■	■	■		
Wheel Bearings and Seals	■	■	■	■	
<b>Axle/Suspension/Rear Wheel Drive and Four Wheel Drive</b>	Axle Bearings and Retainers	■	■	■	■
	Cross Member	■		■	
	CV Joints (Except CV Joint Boots)	■	■	■	■
	Differential Case and All Internal Parts	■	■	■	■
	Drive Shafts (Front and Rear)	■	■	■	■
	Lateral Link	■		■	
	Leaf Spring	■	■	■	
	Locking Hubs	■	■	■	■
	Lower Control Arm and Bushings	■	■	■	
	Multi-Link Components	■	■	■	
	Propeller Shaft	■	■	■	■
	Seals and Gaskets for Listed Components	■	■	■	■
	Suspension Arm Axle	■	■	■	
	Torsion Bars	■		■	
	Transfer Case and All Internal Parts	■	■	■	■
	Universal Joints	■	■	■	■
Viscous Coupling	■	■	■	■	
<b>INFINITI A/C</b>	Accumulator	■	■	■	
	Actuators	■		■	
	Blower Motor	■	■	■	
	Clutch and Pulley	■	■	■	
	Compressor	■	■	■	
	Condenser	■	■	■	
	Condenser Fan and Motor	■	■	■	
	Evaporator	■	■	■	
	Expansion Valve	■	■	■	
	Heater Control and Cables	■		■	
	Heater Unit and Heater Core	■		■	
	High and Low Pressure Hoses	■	■	■	
	High and Low Rear A/C Tube Assemblies	■	■	■	
	Seals and Gaskets for Listed Components	■	■	■	
Sensors	■		■		
Temperature Control Programmer	■		■		
<b>Body/Window/Interior Mechanism</b>	Glass Lift Channel, Retainer, Slide, Stabilizer and Track Guide	■		■	
	Glove Box Locking Mechanism	■		■	
	Hood or Hatch Strut	■		■	
	Ignition, Door Lock Cylinders	■		■	
	Outer/Inner Door Handles	■		■	
	Regulators	■		■	
	Seat Adjusters, Cables, Reclining Seat, Back Release, Seat Back Latch, Tracks and Guide	■		■	
<b>High Tech</b>	ABS Actuator, Module and Sensors	■	■	■	
	Air/Fuel Ratio Feedback and/or Control	■		■	
	A/T Control Unit	■	■	■	■
	A/T Fluid Temperature Sensor	■	■	■	■
	Audio System	■		■	
	Back Pressure Transducer	■		■	
	Body Control Module (BCM)	■	■	■	
	Control Units	■	■	■	
	Cruise Control	■	■	■	
	ECCS Module	■	■	■	
	Electronic Sensors and Solenoids	■		■	
	Navigation and DVD Entertainment System	■		■	
	Rear View Monitor and Cameras	■		■	
	Revolution Sensor	■	■	■	■
	Sensors - Anti-Skid and Deceleration	■	■	■	
	Vehicle Speed Sensor	■		■	
SRS	■		■		

\* New Vehicle Platinum Plans protect factory-installed tires against damage from road hazards for up to 36 months from the In-Service Date, or up to 50,000 km, or their useful life, whichever occurs first. Certified Pre-Owned Plans protect tires (including winter tires) against damage from road hazards throughout the duration of the contract or their useful life, whichever occurs first.

\*\* Included only with Next Level Protection packages.